

# SKILL

## MIDI MANUAL

### MIDI programming

For maps programming, please see the following sequence:

1. Switch ON and connect MIDI controller to MIDI IN/FOOTSWITCH connector of Skill; Default Midi channel is #1.
2. Switch ON Skill as described above.
3. Push Prog pushbutton on Rear Panel; the Prog Status Led will bright and it indicates that Skill is ready to store.
4. Select desired configuration – channels and functions- through the switches on the rear panel.
5. Send the Program changes in which you want to store the map.
6. Repeat points 4 and 5 according to your needs.
7. Press Prog pushbutton. The Status Led it's OFF and indicates that Skill is ready for normal functioning. Now the patches are stored permanently and they can be recalled via MIDI.
8. You can go from normal mode to prog mode and back in any time by pressing Prog button.

### MIDI Channel

Any MIDI channel can be associated to Skill. Programming is very simple and consists of the following points:

1. Connect and switch ON a pedalboard to MIDI IN connector; check that pedalboard sends Program or Control Changes messages on desired MIDI channel.
2. Switch ON Skill and push the Prog switch at the same time. The Program Status Led will bright 3 times, the it will ON.
3. Send a Program Change or a Control Change messages on desired MIDI channel.
4. Switch the Prog OFF.

### Control Changes

Skill can be used via Control Changes, on desired Midi Channel:

- CC82: Channel 1
- CC83: Channel 2
- CC84: FX Loop

Value:

0-63 **OFF** – 64-127 **ON**